




HARK FIRE PITS

HK0820 / HK0821 / HK0822


SAFETY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS - Applicable for Product Code: HK0820 & HK0821

1. Place the bowl on the base as shown

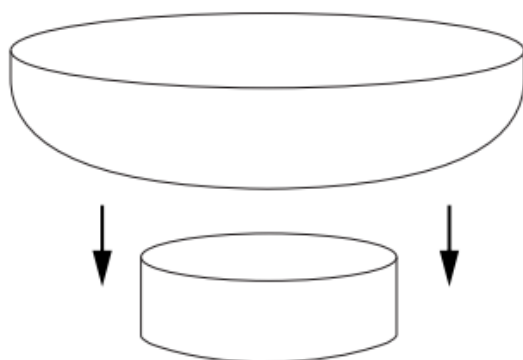

2. Fully assembled

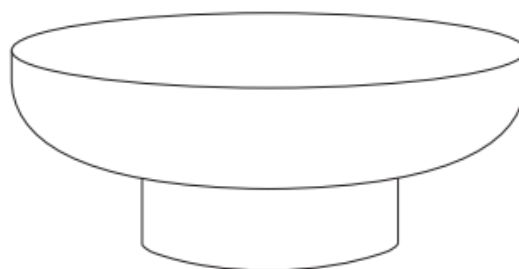

Ensure the Hark Fire Pit is centered on the base to avoid being off balance.

We do not recommend placing the Hark Fire Pit directly on concrete, grass, wood, composite decking, or ceramic or porcelain tiles. The base of the Hark Fire Pit generates high heat, which may damage or catch these surfaces alight.

If your desired Fire Pit area includes concrete flooring, we suggest adding an additional heat-resistant layer, such as brick or clay pavers, between the fire pit and the concrete.

Ensure your Fire Pit is placed on a level surface and is at least 3 meters away from any side or overhead combustible materials, such as a house, fence, deck, or trees.

Fire Preparation

- To start and keep the fire going in the Hark Fire Pit, you'll need dry materials such as kindling and firewood. Gather these materials before lighting the fire so you're prepared.
- If your firewood is too large, cut, trim, or split it so it does not overhang.
- Don't overload the Fire Pit. As a rule, the maximum fuel load should occupy no more than half the area allocated for the fire to burn. In a fire bowl, this means you cannot fill it more than half the diameter of the bowl.
- Avoid arranging the fuel in tight bunches. Leave space between the firewood pieces to allow for good air circulation.
- Make sure there is no ash from previous fires in the fire bowl.

Lighting

- Put some dry tinder in the centre of your Hark Fire Pit. Tinder are the small sticks, twigs, and leaves used to get the fire burning. You could also use some paper or firelighters.
- Start by placing dry kindling and small wood pieces on the tinder.
- Use a long match to light the kindling.
- As the kindling burns, slowly add larger pieces of firewood.

Maintaining the Fire

- Wear oven mittens or protective gloves when tending to the fire.
- After the fire has been established, add more firewood directly on top of the fire as desired, but do this gradually to avoid overloading.
- Use a poker and wear a heat-resistant glove to reposition coals and improve airflow as desired.
- Never pour Petrol, Kerosene, Diesel, lighter fluid or alcohol onto the Fire Pit.

Extinguishing

- Allow the fire to burn out. Do not douse the fire with water; the sudden temperature change can damage the Fire Pit.

Care and Maintenance

- Allow the Hark Fire Pit to cool down before cleaning.
- Always empty out the residual ash after each use.
- If you want to wipe out, use a dry cloth or brush.
- Do not use a high-pressure washer or steam cleaner on the Hark Fire Pit.
- When not used, protect your Fire Pit from the elements to extend its life.

Rust Finish

- The exterior of the Hark Fire Pit is pre-rusted; don't apply coatings or rust-preventative sprays, as they will damage the rusted aesthetic.
- Your rust Fire Pit will continue to weather into its durable rustic finish naturally. **We recommend keeping your Hark Fire Pit away from surfaces that may be affected by rust staining.**

Fire Pit Cooking Grills (sold separately)

- The Hark Fire Pit Cooking Grill offers an ideal surface for cooking barbecues over solid fuel. If you purchased the Cooking Grill, you must use the Fire Pit once without food to fully cure the coated surfaces. After the Fire Pit has been 'burnt in,' you can cook food on the cooking grill provided.
- Be sure to wash and dry the Cooking Grill thoroughly before use.

Safety Warnings

WARNING: FOR OUTDOOR USE ONLY

Retain these instructions for future reference.

READ ALL INSTRUCTIONS, WARNINGS & SAFEGUARDS PRIOR TO ASSEMBLY & OPERATION.

FAILURE TO DO SO MAY RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.

Important Safeguards

- This product is for OUTDOOR USE ONLY. It must not be used indoors, in a garage, shed or any other enclosed space, as toxic carbon monoxide fumes may accumulate and cause asphyxiation.
- This product is not intended for commercial use.
- This product should only be used by adults and keep children and pets at a safe distance.
- Do not use accelerants such as petrol, diesel, white spirit, lighter fluid, alcohol, or similar chemicals to light a fire, as a rapid increase in temperature could damage this product or cause injury. It is only suitable for charcoal, untreated wood, or dry logs.
- Do not place this product on decking or flammable surfaces, including dry grass, wood chips, or leaves.
- Always empty this product after use. Do not remove ashes or charcoal until they are completely extinguished and cooled.
- Do not touch this product until completely cooled unless you wear heat-resistant gloves, as it will be hot during use.
- Do not handle or move this product while it is in use, as it is HOT.
- Do not attempt to store this product until all ashes and charcoal are completely extinguished.
- Always use a safety tool and heat-resistant gloves when adding or moving fuel.
- Always use a safety tool and heat-resistant gloves to move the grill during use, as this product will become very HOT.
- Never leave a burning fire unattended.
- Always keep CHILDREN AND PETS away from the Fire Pit.
- Fire hazard - hot embers may emit while in use.
- Do not overload this product with fuel. Do not add additional fuel until the fire has burned down. If any part of the fire bowl is glowing red, it is overloaded.
- Keep the fuel away from the wall of the fire bowl, as high temperatures may damage it.
- Avoid breathing smoke from the fire and prevent it from getting into your eyes.
- Always thoroughly inspect this product before use.
- A discoloration of the finish may occur after use.
- Do not use in windy conditions or on total fire ban days.
- Do not store or use flammables near the fire pit.
- Ensure your Fire Pit is placed on a level surface and is at least 3 metres away from any side or overhead combustible materials, such as a house, fence, deck, or trees.
- Don't apply any coatings or rust preventative sprays because they will damage the rusted aesthetic.

Warranty Details

The product is guaranteed to be free from defects in workmanship for 10 years from the date of purchase. Defects that affect the integrity and usage of the product and occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion.

- This warranty does not cover units that have been altered or modified.
- This warranty does not cover damage due to normal wear and tear, misuse, abuse, accidents or improper maintenance.
- This warranty does not cover surface scratches, dents, chips, corrosion, or discolouring caused by heat or caused by abrasive or chemical cleaners.

CONDITIONS OF WARRANTY

- The appliance is delivered to the Service Department of Hark Enterprises Pty Ltd or authorised service agent and freight charges both ways are paid by the owner. No liability is accepted for loss or damage during transit.
- The warranty is non-transferable to another owner if the product is sold or gifted by the original purchaser during the warranty period.
- If the product is replaced or repaired, the warranty will expire at the original date
- The appliance is operated and maintained in accordance with the instructions supplied.
- No alterations or repairs have been carried out without obtaining the distributors' prior consent. Such repair or any replacement does not extend the warranty period.
- Proof of purchase must be provided to verify purchase date and establish the warranty period. Only the original purchaser is covered under this warranty.
- The warranty period is calculated from the date of purchase only.

The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

To make a warranty claim or discuss any service issues, please get in touch with us as follows:

Hark Enterprises Pty Ltd
t. (03) 9702 8823
e. service@hark.com.au
w. www.harkbbq.com